



INSTALLATION INSTRUCTIONS

UNIVERSAL TOWING MIRRORS


CIPA Part #11950, #11952, & #11953

PARTS LIST

- A) 11950 Mirror Assembly (1)
- B) Straps (2)
- C) Clips (2)


NOTES:

- 1) Universal Towing Mirror comes fully assembled in box.
- 2) Instructions apply to multiple part numbers as listed, due to similar application procedures. Some illustrations may differ from actual mirror.

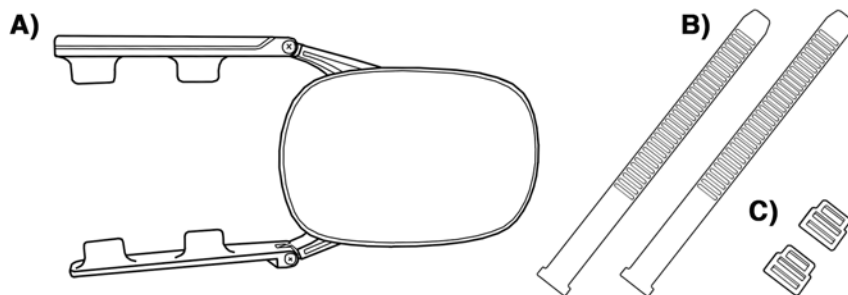


- 1) Loosen adjustment knobs on back of Mirror Assembly and slide assembly onto vehicle rearview mirror, ensuring tabs are aligned with inside of vehicle mirror housing.

- 2) Hand tighten adjustment knobs when proper placement/fit is achieved.

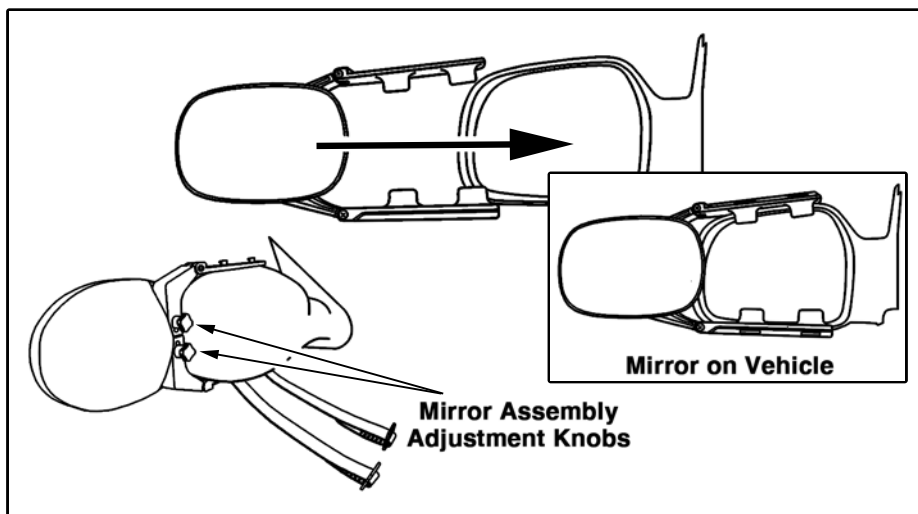


- 3) Adjust rubber straps by pulling them through plastic clips to required length, to tightly hold mirror assembly in place on vehicle mirror.

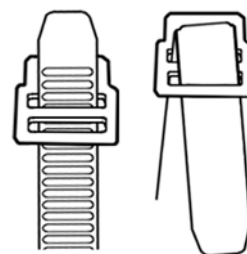

Ensure rubber tabs on strap face the center of plastic clip for proper adjustment

- 4) Pull straps around the back of vehicle mirror housing and lock the plastic clip over tabs on upper arm of mirror assembly. Repeat for second strap.

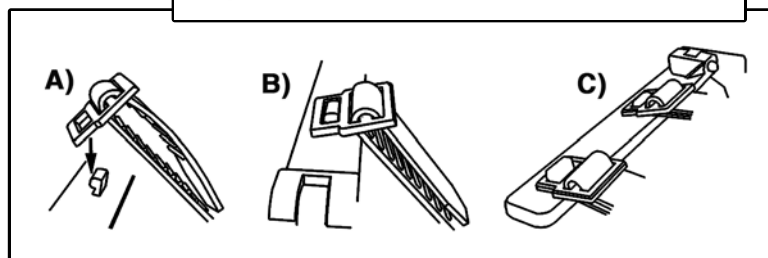

- 5) Mirror assembly is now installed and ready for use. Hand adjust the mirror assembly face to desired position for maximum rearview vision.

