


TRIFECTA^{2.0} SOLID FOLD^{2.0}

INSTALLATION SUPPLEMENT

Read this guide before proceeding with the installation. The steps in this supplement come before the main install sheet for the vehicle noted.

09-18 & 19-23 Classic RamBox Step Rail Installation

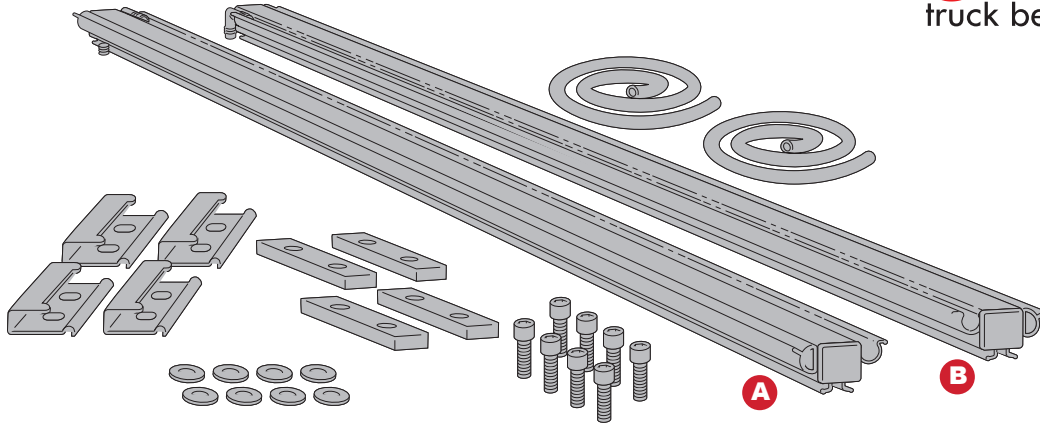


TOOLS REQUIRED

- 1/4" Allen wrench


PARTS INCLUDED IN YOUR KIT

- A** 1x Driver step rail
- B** 1x Passenger step rail
- C** 4x Side clamps
- D** 8x Washers
- E** 4x Double slide nut
- F** 8x 3/16" Socket cap screw
- G** 2x Drain hose

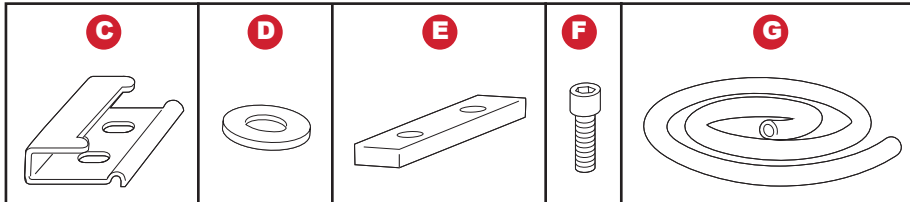


INSTALL STEP RAIL ON EACH RAMBOX SIDE CHANNEL

- 1** Remove end plugs from the slot in each side channel.

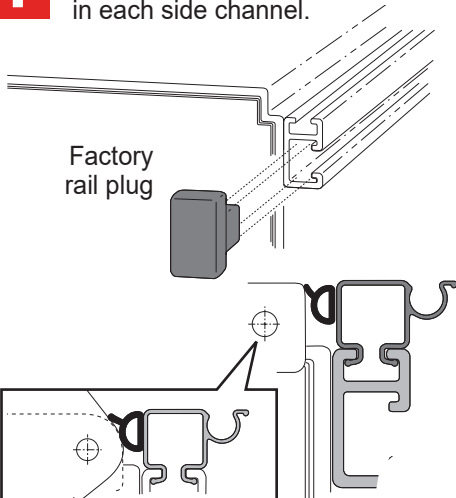


NOTE: Seal will allow RamBox door to open freely.

- 2** Insert the RamBox driver step rail (A) into the upper slot of the factory side rail. Apply soapy water to the seal so the rail slides in easier. Repeat on passenger side with step rail (B).

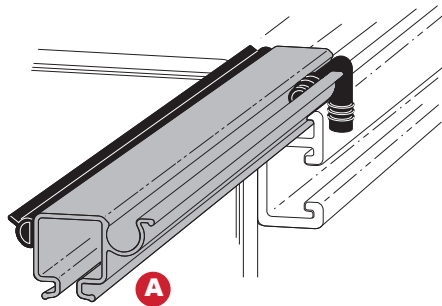


- 3** Add the drain hose (G) and route it through hole in bed. Repeat on passenger side.

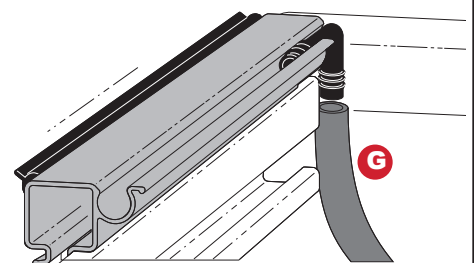


INSTALL CLAMP PLATES TO RAMBOX SIDE CHANNELS


- 4** Remove one (1) cargo tie-down cleat, insert one (1) double slide nut (E), then reinsert the cargo tie-down cleat into the large slot into the RamBox side channel. Then insert the second (E) double slide-nut.

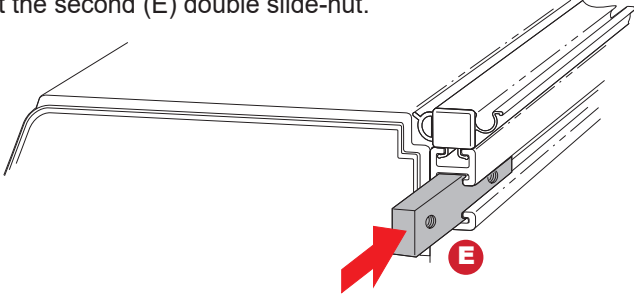


- 5** Position the double slide nuts (E) to line up with the truck bed cover slide clamps. **NOTE:** reposition the cargo tie-down cleats as needed to accommodate your load.

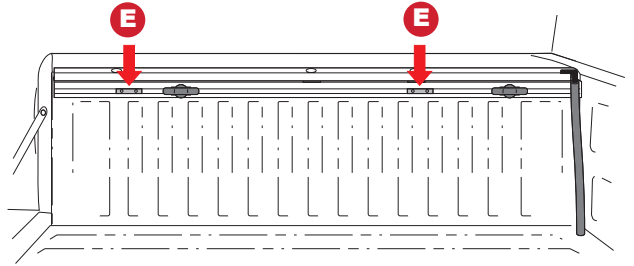

- 6** Attach the truck bed cover side clamps (C) to the double slide nut (E) with washers (D) and 3/16" socket cap screw (F) and adjust position so that they will engage the truck bed cover side clamps. Secure all.

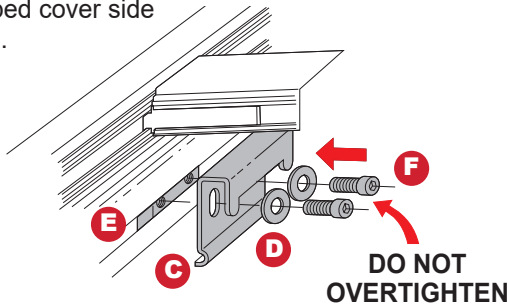


- 7** Reinstall end plugs from the slot in each factory side channel. **NOTE:** factory end plug will help to hold the RamBox rail in place.


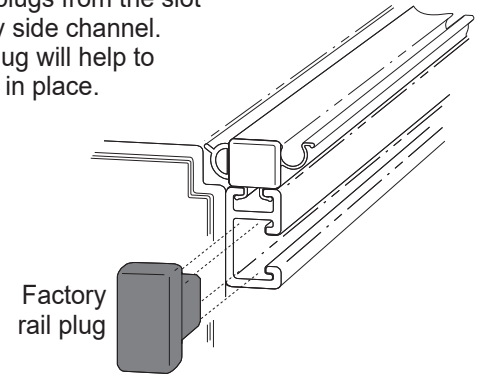


ATTACH TRUCK BED COVER TO THE CLAMP ASSEMBLY


Cab Clamp
Hook clamp directly into the factory rail.

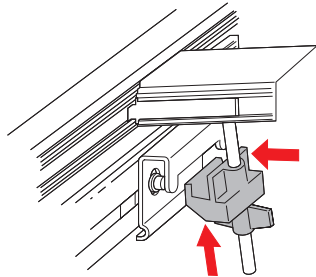

Tailgate Clamp
Hook clamp directly into the factory rail.

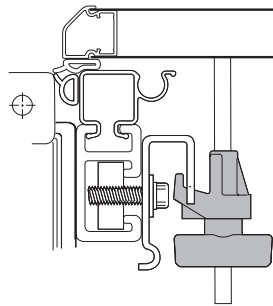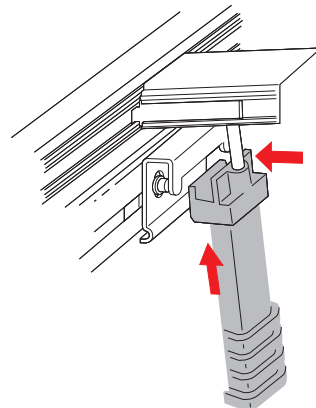

Solid Fold 2.0
shown

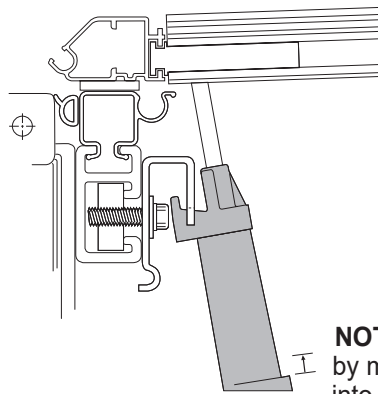

Trifecta 2.0
shown

NOTE: adjust tension by moving tension nut into handle 1/2" - 5/8".

TRIFECTA^{2.0}


SOLID FOLD^{2.0}

INSTALLATION SUPPLEMENT


Read this guide before proceeding with the installation. The steps in this supplement come before the main install sheet for the vehicle noted.

09-18 & 19-23 Classic RamBox Tie-Down Rail Seal Installation


This roll of seal is designed to go between the tie-down rail and the RamBox sheet metal. In heavy rain, without this seal, water may leak into truck bed. Unbolting of factory rail is required to install this seal.

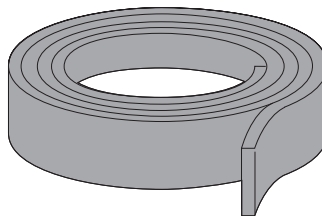

- 1 Remove factory bolts that hold the factory tie-down rail.

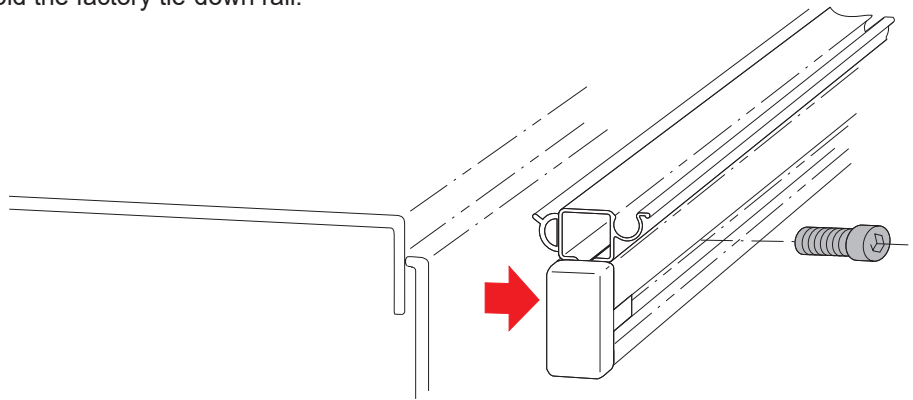

- 2 Apply the adhesive foam seal to the inside surface of the factory tie-down rail.

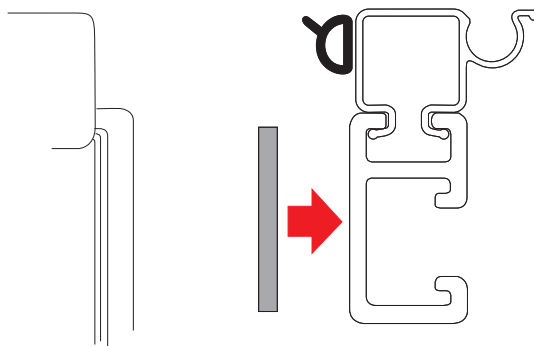

- 3 Reinsert the tie-down rail bolt through the foam seal and reconnect the tie-down rail to the truck bed wall.
NOTE: you may now install the Extang truck bed cover.

